



**DO NOT DISCARD. THIS MANUAL
HAS IMPORTANT OPERATING AND
MAINTENANCE INSTRUCTIONS.
LEAVE WITH THE HOMEOWNER.**

MODEL:



LP Conversion Kit Supplement

Table 1 below shows the available AMD Direct conversion kits. Check the rating plate or the installation manual of the fire pit to be converted and ensure you have the correct Conversion Kit Model based on the Btu rating of the fire pit to be converted to LP gas.

Conversion Kit Model	Common Parts	Btu Ratings	LP Orifice
OAS-LPK47	SS499-8; 113SS4-D5; U3-8D-S	50,000 (14.65kW)	OAS-LP47
OAS-LPK41	SS499-8; 113SS4-D5; U3-8D-S	75,000 (21.98kW)	OAS-LP41
OAS-LPK35	SS499-8; 113SS4-D5; U3-8D-S	100,000 (29.30kW)	OAS-LP35
OAS-LPK31	SS499-8; 113SS4-D5; U3-8D-S	125,000 (36.63kW)	OAS-LP31
OAS-LPK29	SS499-8; 113SS4-D5; U3-8D-S	150,000 (43.96kW)	OAS-LP29
OAS-LPK26	SS499-8; 113SS4-D5; U3-8D-S	175,000 (51.28kW)	OAS-LP26
OAS-LPK22	SS499-8; 113SS4-D5; U3-8D-S	200,000 (58.61kW)	OAS-LP22
OAS-LPK19	SS499-8; 113SS4-D5; U3-8D-S	225,000 (65.94kW)	OAS-LP19
OAS-LPK12	SS499-8; 113SS4-D5; U3-8D-S	250,000 (73.26kW)	OAS-LP12

Table 1

CALIFORNIA PROPOSITION 65



WARNING

This product is designed to operate with one of the following fuel sources: Liquid Propane or Natural Gas. The fuel used to operate this product, and the products of combustion of such fuel, can expose you to chemicals including Benzene which is known to the State of California to cause cancer, birth defects and other reproductive harm and Carbon Monoxide which is known to the State of California to cause birth defects or other reproductive harm.

(For more information go to: www.p65Warnings.ca.gov.)

When converting Burners to LP gas the main burner orifice must be kept a minimum of 6-inches away from the burner connection (nipple) to prevent any back pressure at the LP orifice. See Fig.1 below for details. **Note:** It is acceptable to install a 90° elbow, if necessary, to run the gas line the opposite direction (see Fig 2 or 3). A 90° elbow is not provided with the kit.

All NPT pipe threads must be sealed with approved gas Teflon tape or pipe compound.
Check for any gas leaks before presuming normal operation after conversion is complete.



CAUTION: Ensure there is ventilation under the burner to provide fresh air for air shutter/orifice.

Fig. 1 LP conversion illustration.

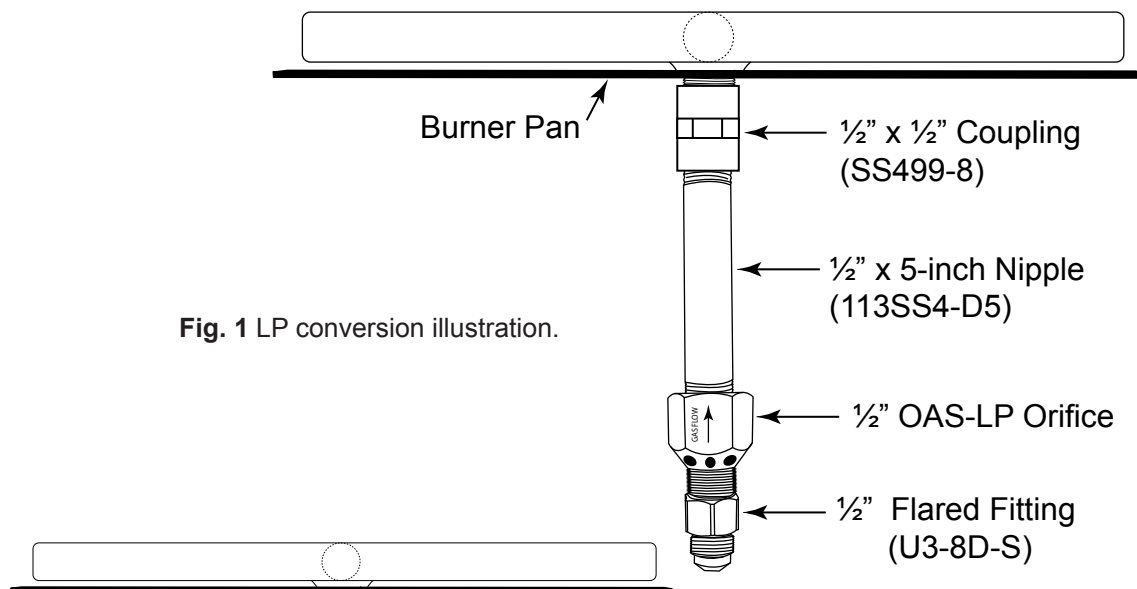


Fig. 2 Optional LP conversion illustration shows a 90° elbow (not supplied).


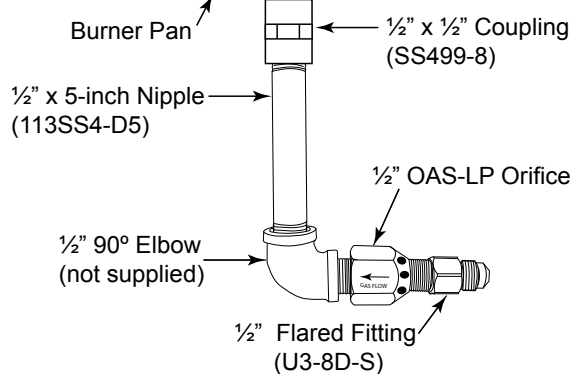


Fig. 3 Optional LP conversion illustration shows a 90° elbow and close nipple (not supplied).

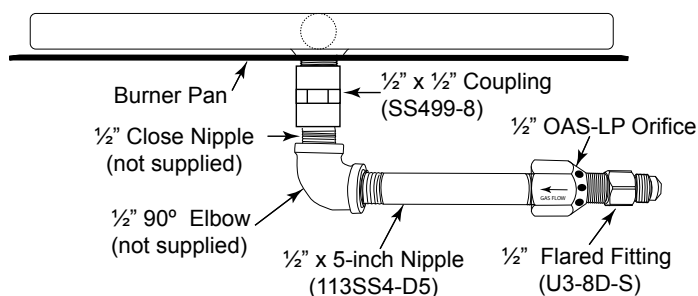

FOR TECHNICAL SERVICE, CALL:

Firegear Outdoors, an Earthcore Industries Brand
1600 Riverfork Drive
Huntington, IN 46750
260-388-5653
techsupport@firegearoutdoors.com

Manual changes often occur, ensure to check the Firegear website for any recent updates and warranty information.